


SLACKER

WIRELESS REMOTE DISPLAY **V4**

Overview

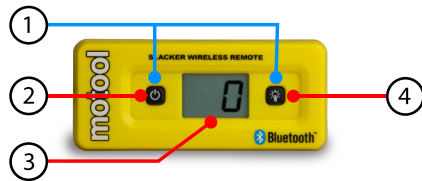

① Wireless Remote Pair

-With Slacker and the remote powered off, press and hold the power and backlight buttons until the display shows "PP" then repeat on remote. Remote will pair and both will display "0".

② Power/Reset

-Press for 1 second to turn on.
-Press for 5 seconds to turn off.
-Press once to reset Slacker to zero.
-Automatically turns off after 5 min.

③ LCD Display

-Displays readings in millimeters.
-Displays system messages.
-Backlit for poor lighting conditions.
-Low battery indicator.

④ Backlight/Auto Zero

-Push to turn backlight on/off.
-Hold for 5 seconds to enter Auto Zero mode.

For Virtual Remote, just turn Slacker on and open the app to get started.
You do not need to pair smartphones, just the wireless remote.